

FireFilter



Initial Installation

- 1) The cabin air filter is located on the firewall under the hood in front of the passenger footwell.
- 2) Remove the cabin air filter cover and inspect door seal.
- 3) Replace cabin air filter (OEM HVAC filter) with the FireFilter while paying attention to the airflow direction of the filter. The FireFilter will fit tighter than the OEM filter to maintain a proper seal. Be mindful of the tighter seal and do not bend the FireFilter during installation and removal.



HVAC filter door



FireFilter Maintenance



Access

Open the hood, remove the filter cover door and inspect the door seal.

Inspection

Remove FireFilter and inspect the filter for debris or particulate saturation. The FireFilter will fit tighter than the OEM filter to maintain a proper seal. Be mindful of the tighter seal and do not bend the FireFilter during installation and removal.



Cleaning

The FireFilter can be given a gross decontamination of larger particulates in the station or in the field. Removal of smoke contamination is not possible since the fine smoke particulates bind to the FireFilter media. Larger dust particles that can restrict the filter efficiency can quickly be removed by gently tapping the filter against a firm surface, like the tire of the engine, with the contaminated side down. We do not recommend the use of compressed air since too much pressure applied to a small area can create a tear in the FireFilter media that particulates will pass through.

